Accessing IP-KVM

IP-KVM console is available via our dedicated server management system - DCImanager.

Please head to the "Access to IP-KVM" tab in your dedicated server management page.

Service Details	Login Details	
📥 Bandwidth usage graphs	URL	https://dci.veesp.com:443
C Reverse DNS	Username	username@domain.com
IP Management	Password	Click here to show password
Change Billing Cycle	Root password	Click here to show password
Change Label		
Manual Service Renew		
Server Power Control		
Server Recovery		
Server Info		
C Reinstall Server		
Access to IP-KVM		
X Request Cancellation		

Click on the URL: https://dci.veesp.com/

And enter your Username and Password from the "Login Details"

Log in		
Email		
username@domain.com		
Password		
	Ŷ	
Log in Forgot passw	ord	

For dedicated servers deployed before August 2021, you might need to generate a new password first. To do that, please head to htt ps://dci.veesp.com/auth/restore and use your veesp e-mail address as log-in. Your password will be e-mailed to you.

Accessing IP-KVM

Once logged in, expand the server info by clicking on the server Name in the list of servers

Under Connected devices press "Open console"

Connected devices



For certain M2S servers and legacy servers "Open console" might not be available. Please use "Got to>Use proxy" to access it.

	Connected devices
	Go to V Open console Enzbled
Witho	out proxy 🛛 🕹
Use p	гоху
	41012

The IPKVM console will load in a new page/tab.

Login Pa		Connected to c3146cf0da83:0 (BB91DE465BAD5AE0)				
cisco UCS	5 KVM	Ē	6 %	۰	? G	
KVM Console	Properties					
Cen Ken	ntOS Linux rnel 3.10.0	7 (Core) -1160.36.2.e17.x86_64 on an x86_64				
417 Pas	20 login: ssword:	root				

Once loaded, you can start using the terminal.